


# Wind Rose and Graphics

## What is the different between blowing from and blowing to in the wind rose?


Blowing From and Blowing To are two different conventions for describing wind direction.

- Blowing From indicates the direction that the wind is coming from (e.g. a West wind is blowing from West to East)
- Blowing To indicates the direction that the wind is going to (e.g. a North wind is blowing to North from South)

WRPLOT View is capable of displaying the wind rose in both formats, simply select the option that you want to use:

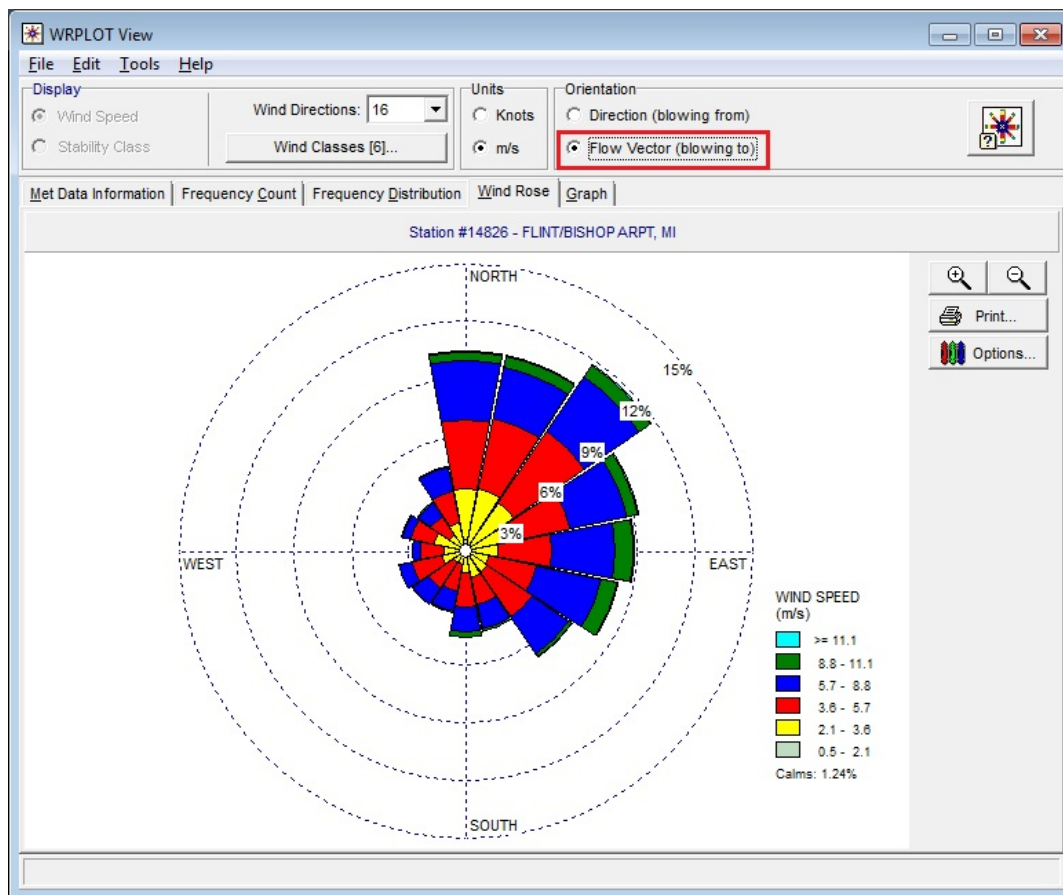

# Wind Rose and Graphics

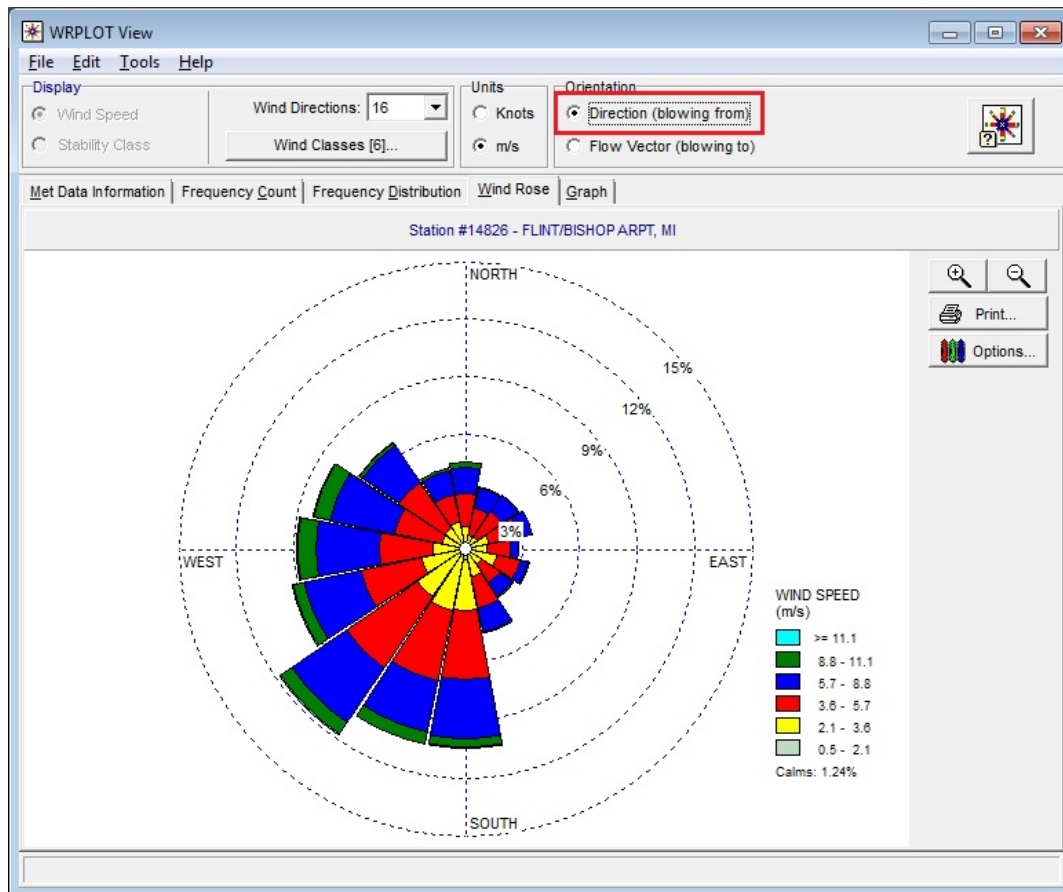

Unique solution ID: #11009

Author: Gareth Davis

Last update: 2010-05-31 14:52